0GU5008
7-1-04

TOTO

OWNER'S Manual

Air Bath

ABA756, ABA774, ABA784, ABA794, ABA904, ABA914

CONTENTS

Important Safety Instructions	....	2
Performance Features	.....	4
Parts and Features	.....	5
How to Use	.....	6
Care and Maintenance	.....	8
Troubleshooting	.....	9
Specifications	.....	10
Warranty	.....	11

Draft only

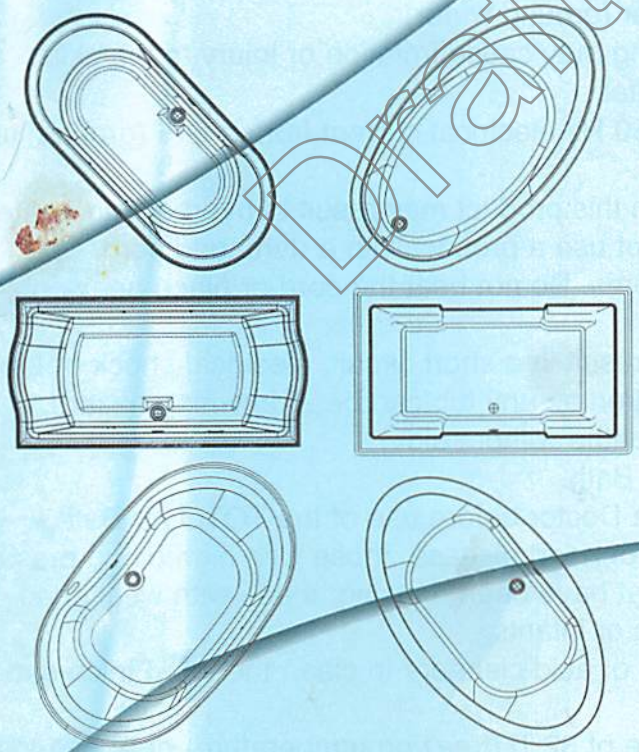

✲ Thank you for your recent purchase of the TOTO **Air Bath**. Please read the enclosed information to ensure the safe use of your product.

Performance Features

Air Bath Functions		Page
5 levels of air massage	• The massage level in the bath can be fully controlled for just the right amount of comfort. • Additional massage modes enhance the bathing experience.	6
Pulsating Massage		
Oscillating Massage		
Automatic shutoff timer	• Prevents prolonged use.	6
Automatic Maintenance Cycle	• Automatically removes water from the air jets to prevent build up of dirt or residue.	7
Anti Slip Tub Surface	• Helps to eliminate slips and falls.	5
Optional Chromo-therapy	• Powerful LEDS colorize the tub with a cascade of color that laxes your mood.	7
Optional Comfort Headrest	• The soft, waterproof pillow profides comfort and support to the head and neck.	—

Draft Only

Parts and Features

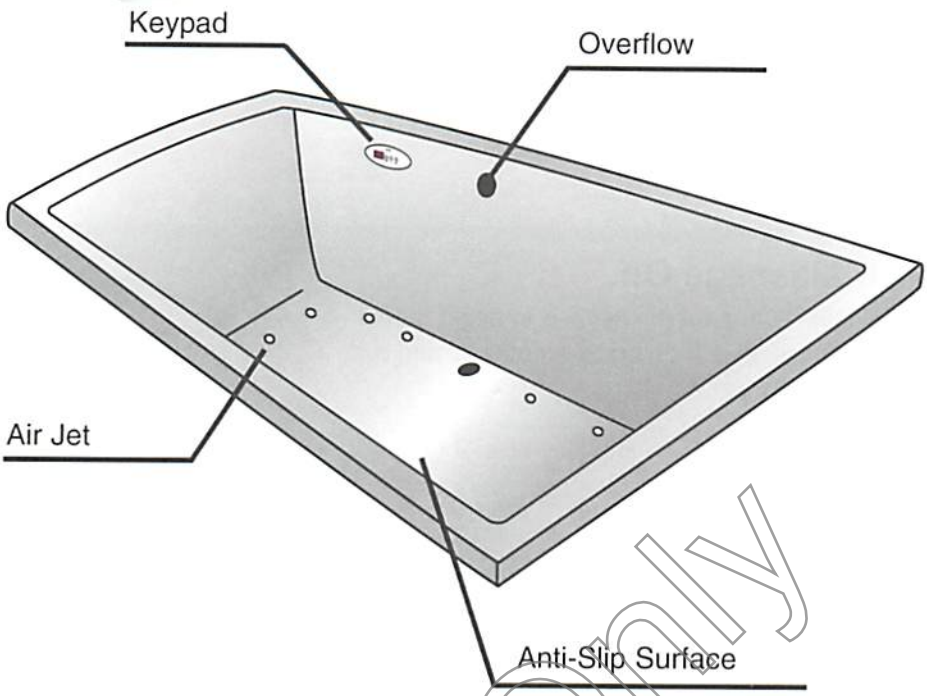

Keypads

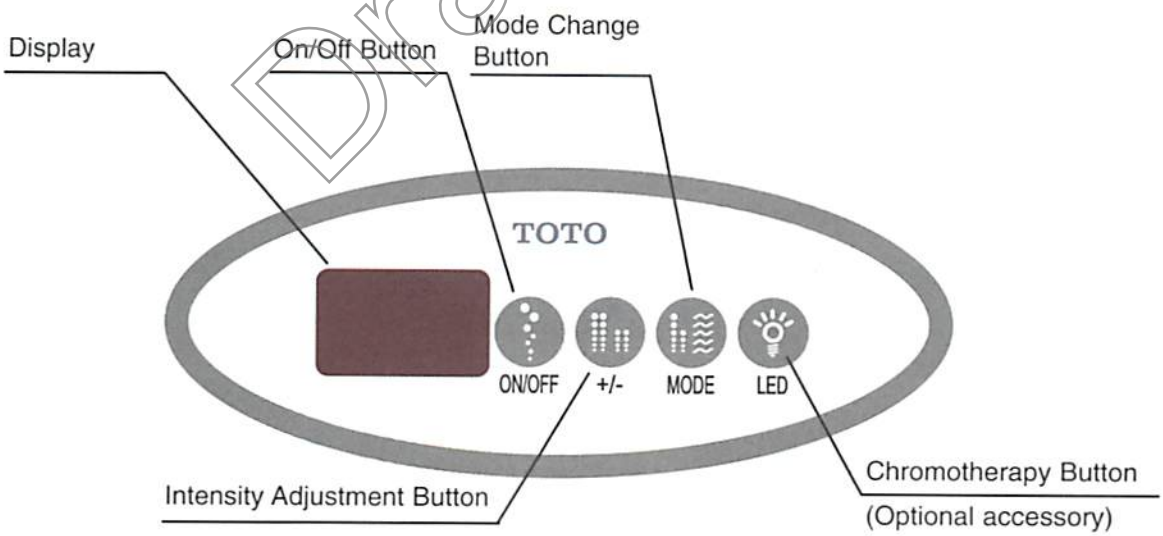

Draft Only

How to Use the TOTO Air Bath

1 Fill the Bath with water.

- Fill the tub to your preference.

* Note: Be careful not to overfill the bath as the water level will rise when the bather enters the bath.

2 Turn the Air Massage On.

- Press the ON/OFF button on the keypad to begin the Air Massage. Intensity level is marked by a small 'n' and a number on the display.

* Note: The Massage begins on intensity level 3 ('n-3') or your previous setting.

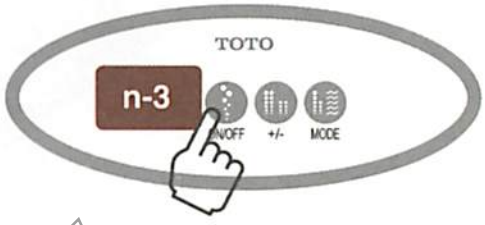

3 Change Massage Intensity.

- Press the '+/-' button to cycle through the massage intensities. The intensities cycle as follows:
  n-3 > 4 > 5 > 4 > 3 > 2 > 1 > 2 > 3.

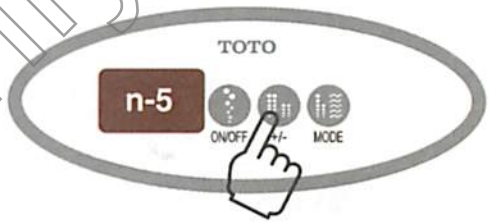

4 Change Massage Modes

- Press the 'Mode' button to change between the two Massage mode and continuous bubble modes. The modes cycle in the following way:
  Normal > Oscillate > Pulse > Normal

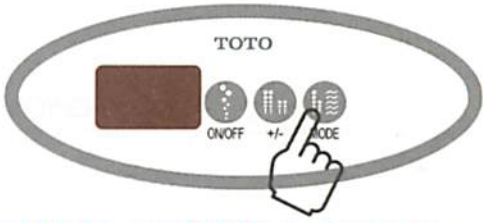

Draft Only

Note: The controller is designed to shut the blower off after 20 minutes of continuous running. To re-engage the blower, press the "On/Off" button.

For Better Results:

Massage Mode 1: Oscillating Massage Mode (OSC)

The Oscillating mode gradually cycles through the intensity settings giving a wave like, soothing massage.

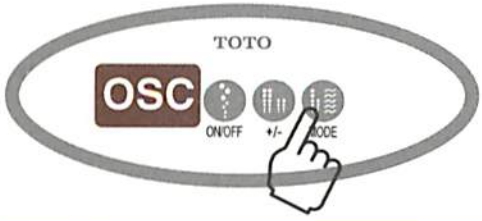

Massage Mode 2: Pulsating Massage Mode (PUL)

The Pulsating mode cycles the jets from intensity level 1 to intensity level 5 giving a powerful, penetrating massage.

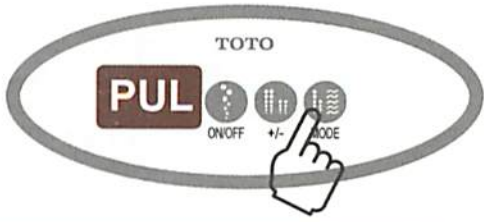

Automatic Maintenance Cycle

1 Drain the tub [illegible]ater

The Sensors automatically detect the water and set up the eject timer once the water is drained.

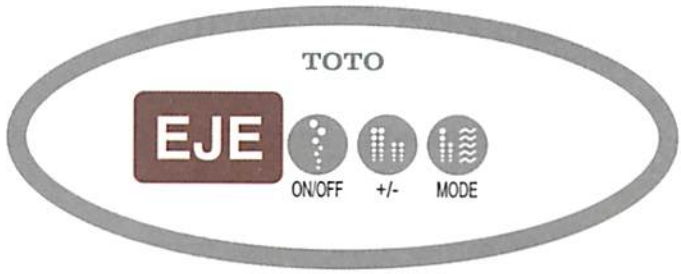

- Once the sensors no longer detect water, the automatic maintenance timer begins counting down from 15 minutes. The Keypad will alternately display EJE and the remaining time.

2 Air is blown through the jets

The Air dries any water remaining in the jets.

- The water removal cycle will run for 2 minutes.
- Activating the blower with no water in the tub will deactivate the automatic water removal cycle.
- To manually initiate the Maintenance Cycle, press the 'On/Off' button for 2 seconds and then release. The display will flash 'EJE'. 10 seconds later, the cycle will start.

Draft Only

Chromotherapy Light (Optional)

1 To Activate: Press the 'LED' button

One of 13 preset light shows begins

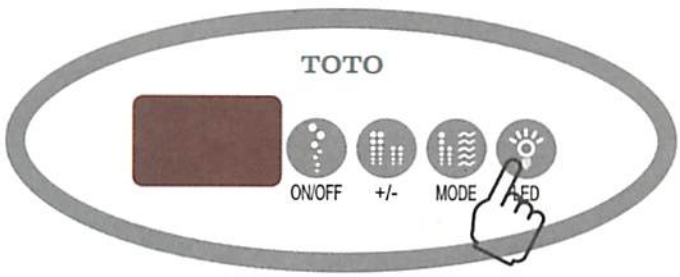

- Pressing the 'LED' button again will turn the light off.

2 Changing the Chromotherapy Mode

Pressing the 'LED' button will cycle through the different Chromotherapy Modes.

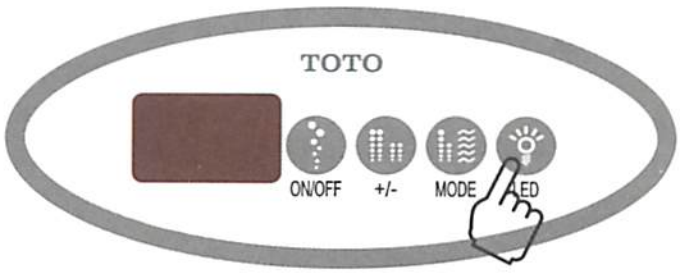

- The first press will turn the light on, the second wil turn it off, the third within 2 seconds will start the light in the next mode. etc.
- The modes are as follows: Slow Spectrum, Fast Spectrum, Slow Random Color, Fast Random Color, High Speed Random (Color Flashes), Blue-Green Fade, Pure White, Pink, Lavender, Light Blue, Dark Blue, Light Green and Dark Green.

Care and Cleaning of your TOTO Air Bath

Wipe the Bath using a soft, damp cloth and a non-abrasive liquid detergent

- Do not use a dry (powder) cleaner or any cleaner that has abrasives. Do not use a strong Acid or a strong Alkalai (Bleach).
- Do not use Nylon or metal scrubbers to clean the Bath.
- Using any of the above will cause irreperable damage to the surface and components.

Tip 1

Clean the Keypad

- Wipe away any dirt on the keypad with a dry cloth. A damp cloth and a little bit of mild detergent can be used on a particularly dirty keypad.

Bathing Aides

- Bathing products such as sea salts, essential oils, algae, etc. are suggested for use to enhance the bathing experience. However, concentrated essential oils should not be applied directly to the skin or the acrylic. They should be added after the tub is filled.

Cleaning the Optional Pillows

- The Pillows (if applicable), should be cleaned at least once a month. Use a mild detergent and damp cloth. A vinyl cleaner can be used on more stubborn stains. A Vinyl rejuvenator liquid can be used to restore the look of the pillows.

Draft Only

Tip 1 Slight scratches can be removed with white automotive polishing putty or extremely fine grain, wet sandpaper (1200-1600 grit).

Troubleshooting

WARNING

Always perform the following

If a leak occurs, immediately turn off the water to the tub and throw the breaker to cut off electrical power to the unit.

WARNING

Always perform the following

Immediately discontinue use of a malfunctioning product.

- Unplug the tub, turn off the water and call a certified repair person.
- Using a malfunctioning product could result in fire, electric shocks or cause water damage.

■ Please check the following before calling for service.

Performance

Problem	Possible Cause	Solution
Completely fails to operate	Is there a power outage or is the circuit breaker out or has the CFCI tripped?	Wait until the power is restored. Turn the circuit breaker back ON.
Breaker Trips Continously	Is the Bath the only thing connected to the Breaker?	Make sure the Bath is the only thing connected to the breaker circuit and is on a 15 A circuit.
Blower stops after only a few minutes	The blower is equipped with a thermal shut off in order to prevent overheating, damage to the blower or risk of fire. The thermal shut off sensor may be detecting overheating due to insufficient air circulation.	Make sure the blower has sufficient air volume and is not clogged with debris.
Jets do not work at low speed	Low air volume is moving through the jets. Is the Blower blocked?	Make sure the blower is clean and has enough air space to draw from.
Jets do not work at high speed	Are the nozzels clogged or ditry?	Fill the tub with hot water and let stand for 2 minutes. Turn jets on and off on highest intensity. If this does not fix the problem, contact your dealer or TOTO for repair.
Motor stops after a long time (20 minutes)	In order to prevent continous operation, the blower automatically shuts off after 20 minutes. This is not a malfunction.	Restart blower with keypad
Keypad works, but blower won't run	Blower cord disconnected or damaged.	Inspect cord, if it is undamaged reconnect cord. Contact Dealer or TOTO for repair.
Intensity or Modes won't change	Motor or keypad damaged.	Contact Dealer or TOTO for repair.
EJE appears on keypad and cycle starts	Any time the blower is activated or the sensor detect water in the system, the EJE timer will activate.	This is not a malfunction. See page 7 for more information.

Optional Equipment

Problem	Possible Cause	Solution
Chromatherapy light won't work	Damaged light, or keypad. Cord may have disconnected.	Reconnect power cord. Return for repair if problems continue.
Pillows won't stick	Suction cups dry. Suction cups may be damaged.	Clean the cups thouroughly and add a little clean water to the cups.

Draft Only